



Swim Course Marker Buoy

Art. No. 1310013 large, 1310014 small

Our buoys increase visibility by making it easier for participants to keep direction and avoid swimming towards dangerous waters or losing their way.

Possibility to affix advertising banner, on the large buoy, as the buoy is equipped with eyelets for affixing. Banner is not included. Great way to brand your event, oversized with wide advertising spaces that can be used for promotion.

Open water courses vary. Normally 6-9 large buoys and 2 small buoys for the finishing lines are used.

Main Features

- High visibility
- Easy to use; inflate and deflate
- Advertising possibility

Product Information

Swim Course Marker Buoy Large

Dimensions when inflated:

Height: 200 cm **Diameter:** 130 cm
Inflates and deflates in approx.

5 -10 minutes depending on pump

Material: PVC Tarpaulin

Sold per unit



Swim Course Marker-Buoy Small

Dimensions when inflated:

Height: 40 cm **Diameter:** 60 cm
Inflates and deflates in approx.

1 -2 minutes depending on pump

Material: PVC Tarpaulin

Sold per unit

Please Note: Supplementary products, Pump, Rope, Snap Hooks sold separately

Banners are not included.

Selected When it Counts



Swim Course Marker Buoy - Useful Information

Swim Course Marker Buoy Large Height: 200 cm, Diameter: 130 cm, Buoy circumference 410 cm
 Prefitted eyelets for affixing advertising banner. We recommend small reinforced holes on banner.

Banner size options (banner not included):

1. Height: 70 cm, Length: 410 cm
2. Height: 50 cm, Length: 410 cm
3. Height: 120 cm, Length: 410 cm

Swim Course Marker Buoy Small Height: 40 cm Diameter: 60 cm when inflated

The following accessories are needed to maintain position of the buoys. (Sold separately)

- To inflate or deflate use a pump. Buoys must be out of the water. Attention: Electric pump sold separately
- Snap Hooks
- Ropes
- Anchors (Be sure to anchor from at least 4 of the bottom hooks of the buoys to avoid ripping)

Inflating/Deflating Instructions and Maintenance

For a long and successful product life, handle with care.

Be careful when opening new box as a cutting knife may damage the inflatable unit.

Also be aware that sharp corners or dragging on pool deck may damage the unit.

After use, rinse off the unit with clear tap water and let air dry before placing back in storage bag.

Please Note: Be careful when opening storage bags and handling the equipment.

A cutting knife, sharp corners or dragging on ground or beach will damage the unit.

To inflate:

1. Unscrew the plug
2. Attach pump and inflate. It will take about 5- 10 minutes for the large buoy and 1- 2 minutes for the small buoy.
3. When finished - screw the plug back on

Please Note: Do not over-inflate as it can damage the buoy beyond repair. Keep air outlet clear of dirt and debris as this may cause air to leak out of the the outlet.

- For Swim Course Marker Buoy Large, place advertisement banners once inflated
- Place buoy in the water
- When finished using - carefully remove from the water.

Please note, any sharp edge may damage the PVC. Rinse with clean water and let air dry.

- Once fully dried - deflate unit

To deflate:

1. Unscrew the plug
2. Use the “air-intake” side on the pump to deflate
3. Clean unit with clean water. Remove dirt and let air dry.

Please Note: Check for dirt and debris in and around the air outlet, clean thoroughly before storage.

- To fit back into storage bag, it is crucial to tightly roll and fold the buoy. (Once buoy is completely dry)
- In case of air leakage through a small hole - wipe area dry and affix repair sheet (not included) with suitable glue for PVC (not included).

Selected When it Counts